

Congratulations and thanks for your purchase! This booklet will tell you everything you need to properly assemble your tent and maintain it.

Follow these instructions carefully and you'll enjoy many years of use – please note that this product is intended for mild, 3 season, family camping use and not for extreme conditions of weather and use

1

Carrying bag X 1 Fly X 1 groundsheet X 1

Long PP Webbing X 4 Repair kit X 1 Steel anchor X 8

Join all green and white poles into 2 identical sets as shown in the sketches. "G" stands for green and "W" stands for white poles respectively with straight ferrules and elbows.

2

a) Lay the rain fly on the ground as flat as possible.
b) Insert the assembled poles through the fly sleeve.
c) Insert the 4 ends of each assembled pole into the pockets of the fly, located at each 4 corners.

3

a) Clip the hooks to the poles.
b) Stake down the poles and the pp webbing which are attached to the tabs on the outside of the rain fly-this will keep it more stable in strong winds.

4

3 persons pods/sleeping quarters, Zulu (sold separately) can be attached to the Axis (main screen house) with the concealed zippers.
Up to 3 pods/sleeping quarters can be joined to Axis.

CARING FOR YOUR TENT:

- Keep it clean: Don't set up your tent in the mud, avoid putting muddy clothing and gear in the sleeping compartments as sand and dirt can scratch the water proof coating and damage zippers
- UV light can accelerate fabric degradation. Therefore, set up your tent in the shade when possible and use the rain fly to protect the inner tent
- To prolong the life of your tent floor, we recommend the use of a tent footprint or separate sheet of PE (tarpaulin) fabric underneath the tent floor to protect against abrasion
- When packing up, shake out dirt and sand as much as possible

Visit us online at www.campingequipmentco.com and be sure to join our Newsletter to receive special offers and discounts on our camping equipment.