

Congratulations and thanks for your purchase! We have tried to make the assembly instructions as clear and concise as possible so you can get on with enjoying your tent quickly and with minimal fuss.

We've also included some tips on how to prolong the life of your tent – if you follow this advice, you will be able to enjoy your tent for years to come!

Contents:

- 1 rain fly
- 2 inner tent
- 6 fiberglass poles
- 2 steel poles
- 2 black elbows
- 62 tent stakes
- 22 guy ropes
- 1 repair kit

Tent Assembly Instructions, Model: Centauri

Rain fly:

- Lay the rain fly on the ground as flat as possible
- Insert each color coded tent pole into the corresponding color coded pole sleeve
- To assemble the main door entrance, assemble the 3 shortest fiberglass poles and insert through the poles sleeves around the door
- Insert the top end of the vertical door pole into the black plastic elbow and the closest end of the horizontal door pole into the other end of the black plastic elbow – repeat for the door poles on the other side of the door
- At the bottom ends of each fiberglass pole, insert the corresponding pins (located at the bottom edges of the rain fly) into the ends of each fiberglass pole
- Stake down the inner tent through the appropriate PP webbing loops to secure it
- Stake down the guy ropes which are attached to the tabs on the outside of the rain fly – this will keep it more stable in strong winds
- There is a removable tub style water proof floor for the rain fly – simply lay it out on the inside of the tent and stake it down at the corners.
- The rain fly is now assembled

Inner tent

- Take each inner tent to the appropriate area on the inside of the rain fly
- Hook the inner tents, 1 by 1, into the inside of the rain fly by staking down the bottom rear corners and working your way forward to the top using the plastic rings and toggles – do this for the desired number of inner tents – by leaving inner tents out, you can increase the storage or living capacity of the tent as well as shed weight

Caring for your tent:

1. Keep it clean: Don't set up your tent in the mud, avoid putting muddy clothing and gear in the sleeping compartments as sand and dirt can scratch the water proof coating and damage zippers
2. UV light can accelerate fabric degradation. Therefore, set up your tent in the shade when possible and use the rain fly to protect the inner tent
3. To prolong the life of your tent floor, use a separate sheet of PE fabric underneath the tent to protect against abrasion
4. When packing up, shake out dirt and sand as much as possible
5. At home, clean your tent with a damp cloth, never use harsh cleaning chemicals, and air dry
6. When storing, allow the tent to sit loosely to prevent creases

Visit us online at www.campingequipmentco.com and be sure to join our Facebook and Twitter pages for new product information and to receive special offers and discounts on our camping equipment.