

Congratulations and thanks for your purchase! We have tried to make the assembly instructions as clear and concise as possible so you can get on with enjoying your tent quickly and with minimal fuss.

We've also included some tips on how to prolong the life of your tent – if you follow this advice, you will be able to enjoy your tent for years to come!

Tent Assembly Instructions, Model: EPHOR

Poles and components:

- Fiberglass poles: extend all sets of fiberglass poles and line them up on the ground – each fiberglass pole is color coded to match the part of the tent that it belongs to

Rain fly:

- Lay the fly on the ground as flat as possible
- Each tent pole is color coded to match a corresponding tent pole sleeve to aid in assembling the tent
- Insert each pole through each sleeve at the top of the fly
- All poles can now be secured by their "pin and ring" locking systems and tent stakes
- Tension of the fly can be adjusted by the guy ropes which you secure to the rain fly with the guy rope tabs
- You can now use the rain fly as a free standing shelter
- The front door can be taken away if you want your living room is brighter.

Inner tents:

- Each inner tent hooks to the inside of the rain fly using a system of toggles and rings – certain toggles are color coded to aid in assembly
- Take the inner tent inside the assembled rain fly to its appropriate location
- Starting from the rear of the inner tent, stake down the corners along the bottom edge of the rain fly
- Hook the inner tent to the underside of the rain fly starting from the bottom rear and work your way forward to the top using the toggles on the outer wall of the inner tent and the corresponding rings running along the underside of the rain fly

Floor:

- There is a removable water proof floor for rain fly – simply lay it out on the inside of the tent and stake it down at the corners.

Caring for your tent:

1. Keep it clean: Don't set up your tent in the mud, avoid putting muddy clothing and gear in the sleeping compartments as sand and dirt can scratch the water proof coating and damage zippers
2. UV light can accelerate fabric degradation. Therefore, set up your tent in the shade when possible and use the rain fly to protect the inner tent
3. To prolong the life of your tent floor, use a separate sheet of PE fabric underneath the tent to protect against abrasion
4. When packing up, shake out dirt and sand as much as possible
5. At home, clean your tent with a damp cloth, never use harsh cleaning chemicals, and air dry
6. When storing, allow the tent to sit loosely to prevent creases