

Congratulations and thanks for your purchase!

We have tried to make the assembly instructions as clear and concise as possible so you can get on with enjoying your tent quickly and with minimal fuss.

We've also included some tips on how to prolong the life of your tent – if you follow this advice, you will be able to enjoy your tent for years to come!

**Contents:**

- 1 rain fly
- 1 inner tent
- 3 fiberglass poles
- 6 steel poles
- 6 black pole joints
- 20 tent stakes
- 6 guy ropes
- 1 repair kit

**Hex Screen House: Tent Assembly Instructions**

1. Remove contents of the tent bag
2. Carefully assemble tent poles – do not let the shock cords snap the fiber glass poles together
3. Unfold the inner tent and the rain fly
4. Insert the color coded tent poles into the corresponding color coded pole sleeves
5. Assemble the main poles and fit the plastic bracket to the top of each assembled main pole
6. Insert each end of the fiber glass poles into the brackets
7. Insert the pins found at the bottom corners of the rain fly into both ends of each main pole
8. Clip the main poles to the edges of the rain fly
9. Stake down the rain fly through the rings and webbing loops
10. Attach the inner tent to the inner walls of the rain fly using the plastic hook and toggles starting from the bottom rear and working forward towards the top

**Caring for your tent:**

1. Keep it clean: Don't set up your tent in the mud, avoid putting muddy clothing and gear in the sleeping compartments as sand and dirt can scratch the water proof coating and damage zippers
2. UV light can accelerate fabric degradation. Therefore, set up your tent in the shade when possible and use the rain fly to protect the inner tent
3. To prolong the life of your tent floor, use a separate sheet of PE fabric underneath the tent to protect against abrasion
4. When packing up, shake out dirt and sand as much as possible
5. At home, clean your tent with a damp cloth, never use harsh cleaning chemicals, and air dry
6. When storing, allow the tent to sit loosely to prevent creases