

The Camping Equipment Co.

Congratulations and thanks for your purchase!

We have tried to make the assembly instructions as clear and concise as possible so you can get on with enjoying your tent quickly and with minimal fuss.

We've also included some tips on how to prolong the life of your tent – if you follow this advice, you will be able to enjoy your tent for years to come!

Rock Hopper: Assembly Instructions

Tent configuration:

1. Remove contents of the bag
2. Unfold the inner tent and the rain fly
3. Extend each of the 2 aluminum tent poles and feed each tent pole through the correct sized pole sleeve i.e. short pole through the short pole sleeve etc
4. Place the tent on the ground and stake it to the ground through the loops around the bottom edge of the rain fly
5. Place the rain fly on top of the tent and hook it to the inner tent using the hooks found on the bottom edge of the rain fly and the corresponding metal rings on the bottom edge of the inner tent

Hammock configuration:

1. Wrap the webbing belt around the tree bringing the loops together in line with the opposite tree
2. Pass the rope ends through the webbing loops
3. Adjust the hammock until it is level and evenly spaced between each tree and under light tension
4. Wrap the rope end around the support rope then drop the rope end down into the space between the webbing loops and the tree
5. Repeat lashing 3 more times in a figure 8 pattern and tie off
6. Using guy ropes, stake down the corners of the hammock to the ground
7. Lay rain fly over hammock at attach using hooks and rings

Caring for your tent:

1. Keep it clean: Don't set up your tent in the mud, avoid putting muddy clothing and gear in the sleeping compartments as sand and dirt can scratch the water proof coating and damage zippers
2. UV light can accelerate fabric degradation. Therefore, set up your tent in the shade when possible and use the rain fly to protect the inner tent
3. To prolong the life of your tent floor, use a separate sheet of PE fabric underneath the tent to protect against abrasion
4. When packing up, shake out dirt and sand as much as possible
5. At home, clean your tent with a damp cloth, never use harsh cleaning chemicals, and air dry
6. When storing, allow the tent to sit loosely to prevent creases